

Toyota TechDoc

Outline OFF	Top Back New
OUTER REAR VIEW MIRROR > INSTALLATION	OUTER REAR VIEW MIRROR > INSTALLATION for Preparation <u>Click here</u>
1. INSTALL OUTER REAR VIEW MIRROR ASSEMBLY LH	HINT: • Use the same procedure for the RH and LH sides. • The procedure listed below is for the LH side.
2. INSTALL FRONT DOOR INNER GLASS WEATHERSTRIP LH	<ol> <li>INSTALL OUTER REAR VIEW MIRROR ASSEMBLY LH</li> <li>a. Attach the claw to install the outer rear view mirror, and then install the 3 nuts.</li> </ol>
3. INSTALL FRONT DOOR TRIM BOARD SUB- ASSEMBLY LH	Torque: 8.0 N*m{ 82 kgf*cm , 71 in.*lbf } b. Connect the connector.
<ol> <li>INSTALL ASSIST GRIP COVER LH</li> <li>INSTALL NO. 2</li> </ol>	2. INSTALL FRONT DOOR INNER GLASS WEATHERSTRIP LH
<ul> <li>6. INSTALL FRONT DOOR INSIDE HANDLE BEZEL LH</li> <li>6. INSTALL FRONT DOOR LOWER FRAME BRACKET GARNISH LH</li> <li>7. ADJUST SIDE TELEVISION CAMERA ASSEMBLY (w/ Side Monitor System)</li> </ul>	a. Install the front door inner glass weatherstrip.
	3. INSTALL FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH
	a. Connect the front door lock remote control cable assembly and front door inside locking cable assembly.


- b. Connect 2 connectors.
- c. w/ Seat Position Memory System:
  - i. Connect the connectors.

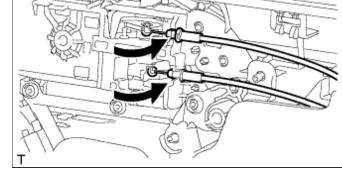

d. Attach the front door trim board subassembly by attaching the 4 claws of the front door inner glass weatherstrip as shown in the illustration.

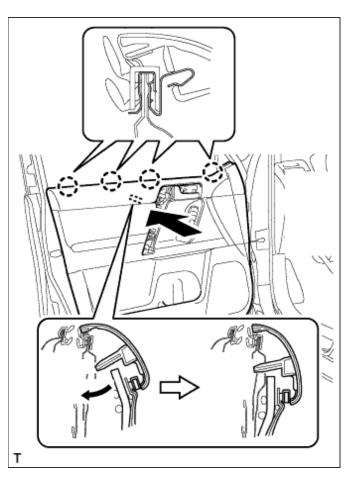


- e. Attach the 12 clips and front door trim board retainer to install the front door trim board sub-assembly.
- f. Install the 3 screws.

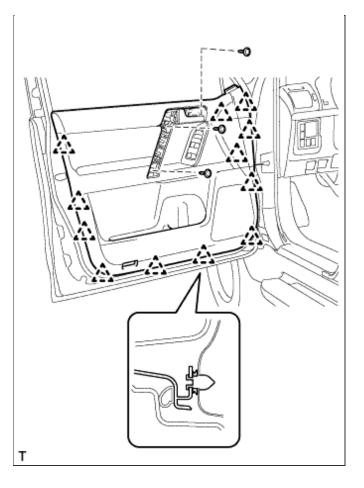


## 4. INSTALL ASSIST GRIP COVER LH

a. Attach the 8 claws to install the assist grip cover.

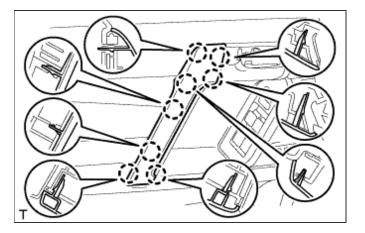

## 5. INSTALL NO. 2 DOOR INSIDE HANDLE BEZEL LH

a. Attach the 3 claws to install the inside handle bezel.

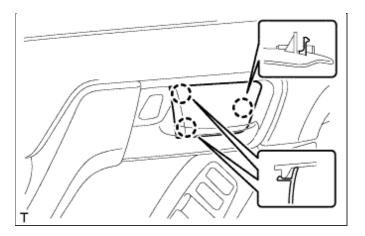

## 6. INSTALL FRONT DOOR LOWER FRAME BRACKET GARNISH LH

a. Attach the 2 claws to install the front door lower frame bracket garnish.

## 7. ADJUST SIDE TELEVISION CAMERA ASSEMBLY (w/ Side Monitor System)

- a. w/ Rear View Monitor System: Adjust the side camera (<u>Click here</u>).
- w/ Parking Assist Monitor System: Adjust the side camera (<u>Click here</u>).

Toyota TechDoc