


Freestar Liftgate Latch Removal

1. Remove the interior liftgate trim panel. See illustration #2
2. Remove the exterior liftgate release handle and remove the license plate housing illustration #1.
3. To remove the liftgate latch, remove the parts in the order indicated above and in the following illustration and table.


Item	Description
1	Electrical connector
2	Electrical connector
3	Bolts (3)
4	Liftgate latch Removal

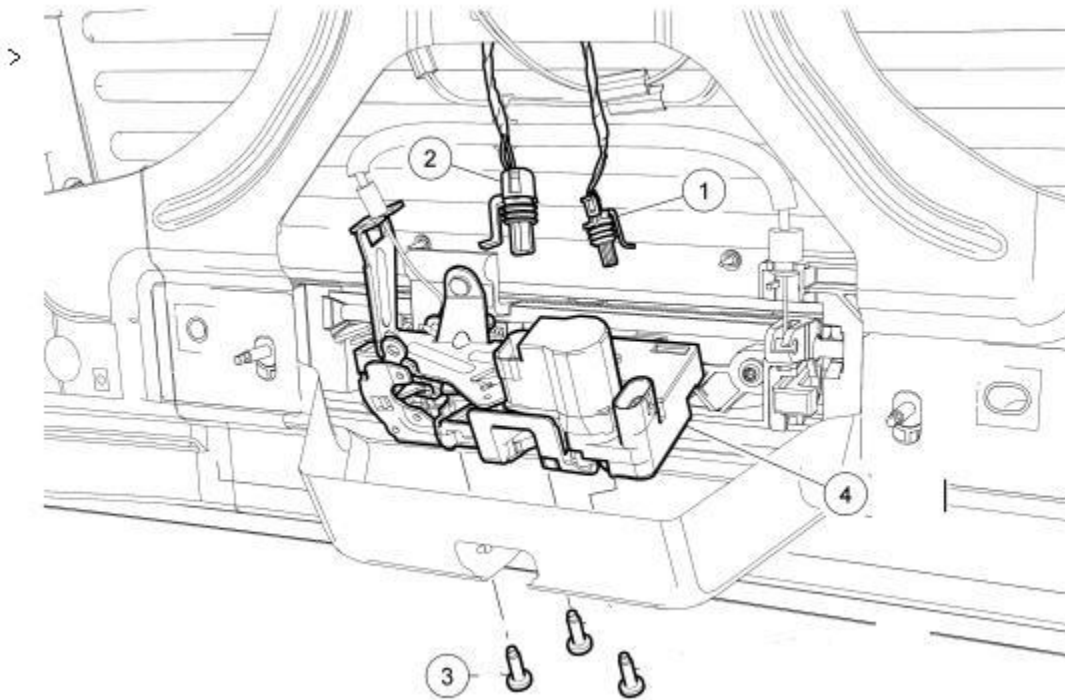

4. To install, reverse the removal procedure.

Item 4: Liftgate Latch Removal Note

1. Disconnect the liftgate actuating cable from the latch.

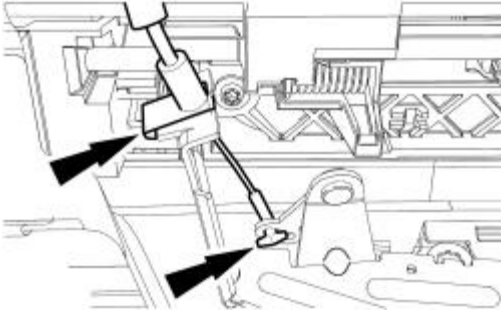

Item 3: Liftgate Latch Installation Note

1. Hand-tighten the bolts in the sequence shown.
2. Tighten the bolts in the sequence shown.

