


### License Plate Housing

1. First remove the interior liftgate trim panel. See illustration #2.
2. Remove the parts in the order indicated in the following illustration and table.

Item		Description
1		License plate housing nuts (3)
2		License plate housing nuts (2)
3	—	Electrical connector (2 )
4		License plate housing

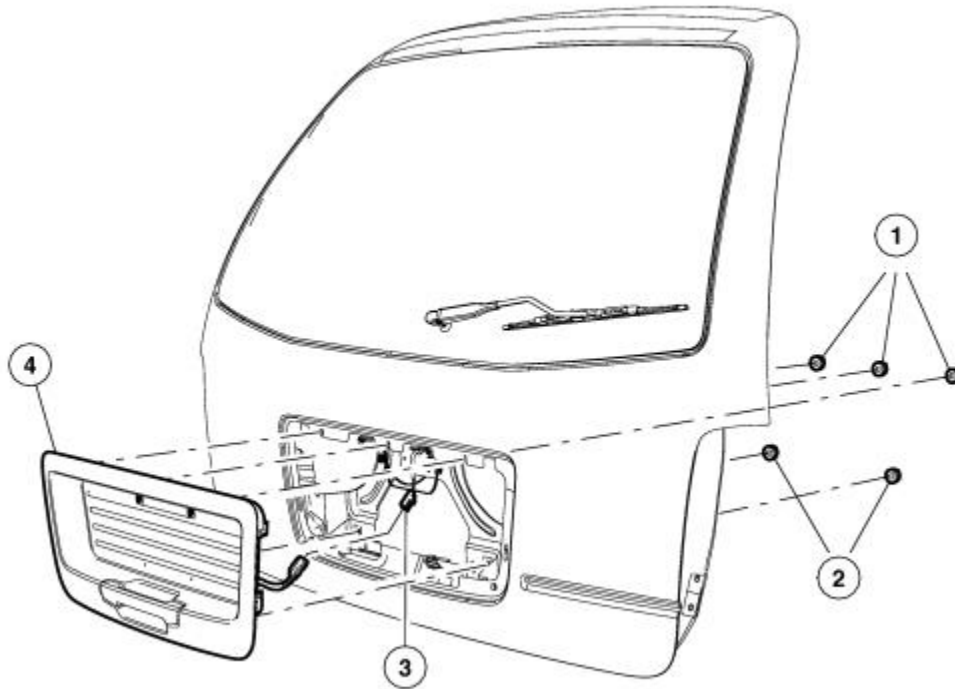

3. To install housing, reverse the removal procedure.

#### Item 4: License Plate Housing Removal Note

1. Disconnect the liftgate handle actuating cable and position aside.

