

Liftgate Trim Panel

Remove the parts in the order shown in the following illustration and table.


To remove individual parts, only follow the listed steps:

Part	Steps
Liftgate trim panel	1-5
Liftgate assist handle	2, 3

Item	Description
1	Liftgate window trim moulding
2	Liftgate assist handle screws
3	Liftgate assist handle
4	Liftgate trim panel screw
5	Liftgate trim panel

Trim release note.

Pull out and away firmly on the lower portion of the upper trim panel (Note the upper attachment points insert upwards into the liftgate) and should be released after the lower clips.

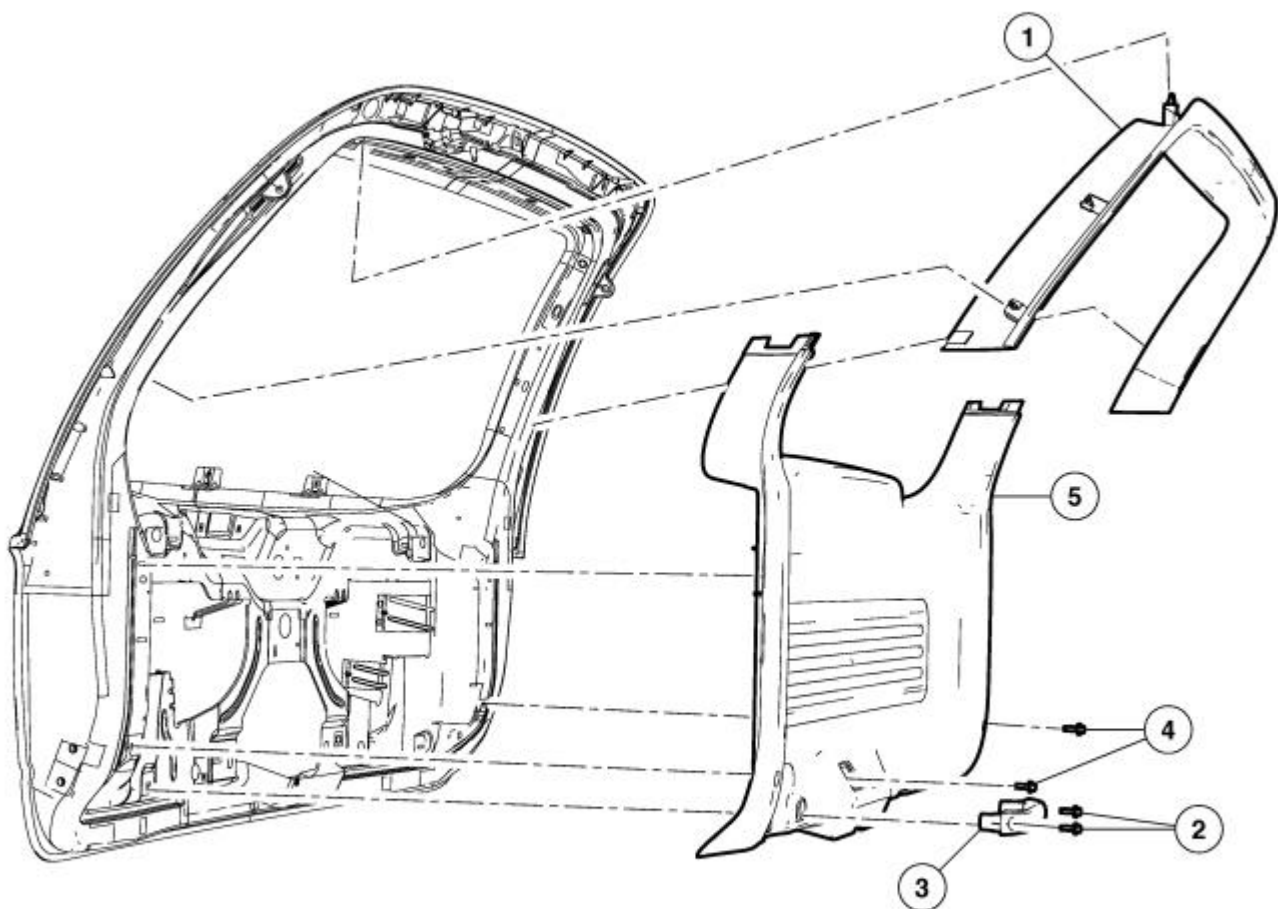

2. To install, reverse the removal procedure.