


PARTS LIST FOR COLEMAN LANTERNS 220E and 228E

PART NO. DESCRIPTION

17 - 508	Machine Screw (#4— 36x1/4 Rd. Hd. Brass)
021A306	(21A) Mantle (Pk'd 2)
15 - 053	Machine Screw (#6—32x3/16)
101 - 324	Tube (Burner)
104 - 147	*Nut (27/64—27 Hex)
112 - 3231	Cap (Burner)
118A3041	Eccentric Block
118B1361	Gasket (Filler Plug)
118B1381	Needle (Fuel and Air Tube)
118B2181	Gas Tip (Marked 5)
118B2381	Needle Assembly
118B620	Packing (Valve Stem)
200A5201	Plunger Ass'y (Pump)
202 - 6491	Wheel (Valve)
203 - 441	Nut (Ball)
216 - 509	Leather (Pump)
220B1401	Filler Cap
220B3221	Tube (Air Intake—Brass)
220B3261	Mixing Chamber (with Screw)
220B340	Rod (Ventilator)
220B3531	Stem (Tip Cleaner)
220B3571	Cleaner Ass'y (Gas Tip)
220B3991	Burner
220B4231	Bail
220B485	Ventilator
220B498	Frame and Bail
220B950	Wrench (Small)
220C6531	Stem Assembly
220D1461	Tube Assembly (Fuel and Air)
220D6571	Valve (Less Generator and Complete Ass'y)
220E1651	Fount (Complete)
220E289	(T44DL) Generator
220E4291	Base Rest
227 - 480	Ventilator
228B4241	Bail
228B498	Frame and Bail
228E429	Base Rest
242B532	Stem (Air)
242B5381	Check Valve
252B619	Disc (Direction)
4001 - 127	Screw (Sheet Metal #2x3/16 Type Z Bd. Hd.)
605 - 210	Jamb Nut
690 - 048	(330) Globe

*Use 220B950 Wrench

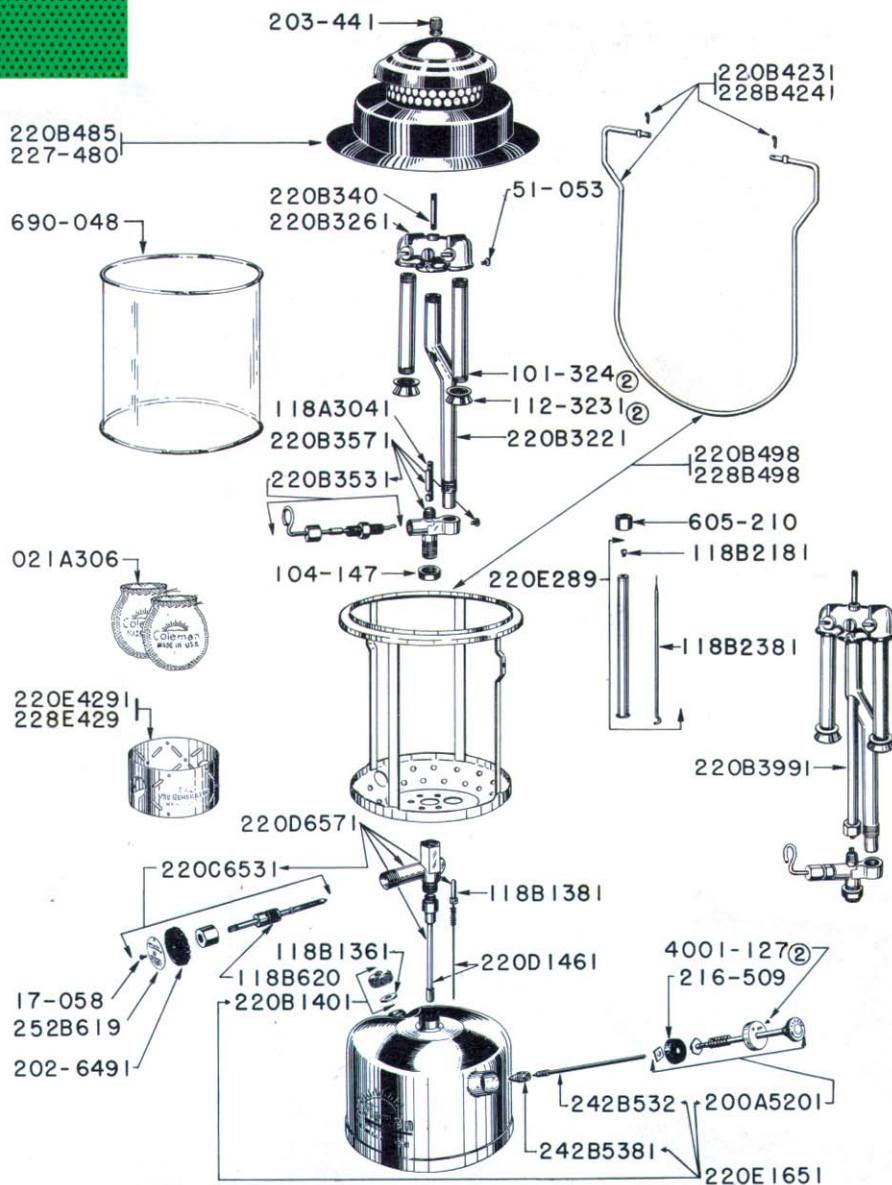

② Quantity of Parts Used in Assembly

See your Coleman Dealer for Repair Parts