 




53300-Collapsible Drop Basket Manual

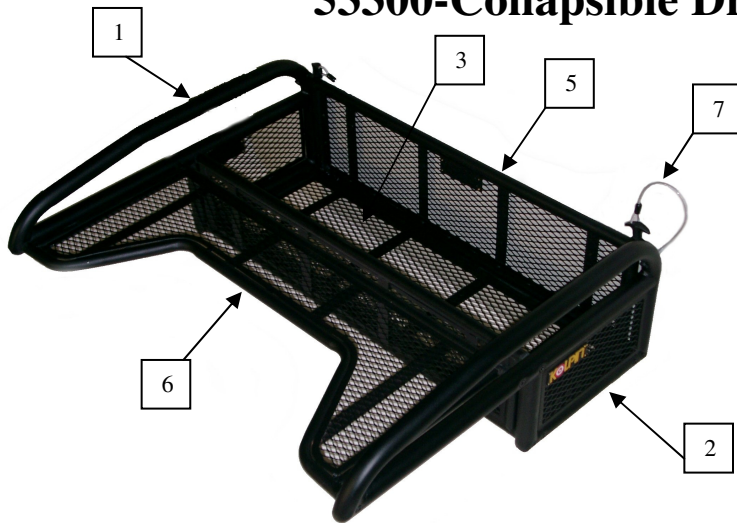

NO.	Description	Quantity
1	Left side plate	1
2	Right side plate	1
3	Basket Bottom	1
4	Drop Side	1
5	Tail Gate	1
6	Contoured Rack Bottom	1
7	Pin and Cable (attached)	2
8	1/4" – 20 U-Bolt	4
9	1/4" – 20 Nylon Nut	8
10	Rubber Caps	8
11	Cross over washers	4
12	M8 x 68mm Basket Bolts	14
13	Allen Wrench	1

Note: This product is designed to be used on tubular steel racks!

Drop Basket Assembly:

1. Lay out the six sections of the Drop Basket. The tail gate will be the rectangular portion with a Kolpin label on it. The Rack Bottom will be contoured to fit around the ATV seat. The drop side will be the smallest rectangular portion. The bottom will be the larger rectangular portion without a label. The left and right sides will be made of 1.5 inch tubing with the labels facing outward.
2. Check to see that all the plastic plugs are inside the ends of the 1 inch tubing. These will prevent any excess noise.
3. Using the basket assembly bolts, attach the sections together with an Allen Wrench. Lock-tight can be placed on the bolts to prevent any loosening of the bolts. NOTE: Honda models will need to use the Contoured Bottom (#6) with the welded straps facing UP.

Drop Basket Mounting:

1. Locate positions on your ATV rack to mount the Drop Basket. Try to stay near the metal reinforcement straps on the metal mesh.
2. Slide the 1/4" U-Bolts under the OEM Rack and up through the metal mesh, cross over washer, and thread the 1/4" Nylon Nuts onto the U-Bolt. Repeat this step four times to securely attach the Drop Basket to your ATV.

Drop Basket Use:

- The Drop Basket has a tail gate that can open freely or stop in a 90 degree position. In order to achieve the 90 degree position, insert the pins into the holes on the tail gate that lock the tail gate in the up position. The cable will pull tight at the 90 degree position.
- Note that the Drop Basket is designed to carry only as much weight as the ATV manufacturer recommends. Overloading can cause loss of control!
- The tail gate is designed to hold 50#, and should always be in the upward position when the ATV is moving to prevent damage to the cables.



Kolpin Outdoors, Inc.

205 N. Depot Street, Fox Lake, WI 53933

Phone #: (877) 9KOLPIN or (920) 928-3118

www.kolpin.com customerservice@kolpin.com