

Mazdaspeed 3 07-09 TAB Power steering hose bracket

Thank you for purchasing our mazdaspeed 3 / gen1 Tab kit. The Tab is a simple bracket to allow removal of the rear tmc support and maintain the bracket for the power steering tube / hose.

Step #1

Unbox your kit and lay out your hardware carefully.

You should have the following hardware for the kit.

- 1 x M6 Bolts
- 1 x M6 Nut
- 1 aluminum bracket



Step #2

Remove the power steering bracket nut from the power steering line attached to the tmc support. Remove the tmc support from the engine. You will have to remove 2x 13mm head bolts. Save 1 bolt for installation of the tab. Remove the power steering L bracket from the tmc bracket using a 10mm wrench or socket and set aside.




Step #3

Using the supplied nut and bolt, attach the L bracket to the tab.



Step #4

Bolt the tab to the passenger side mounting hole that the tmic bracket used to be installed. Use the 13mm head bolt we saved from step 1. Now reattach the p/s hose to the L bracket using the factory nut.

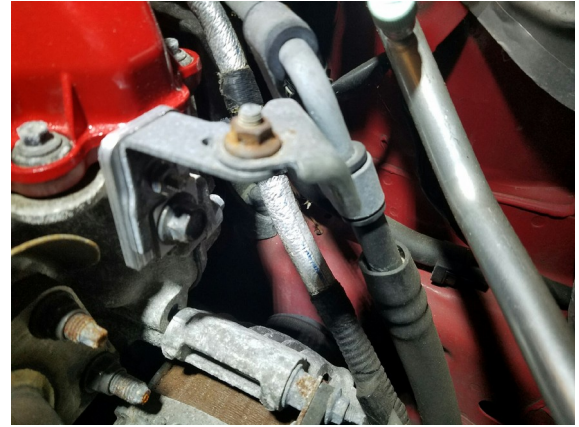

Complete