


















Factory Default Reset - Front Panel (Calibration)

1. Enter the FB1200 setup menu using the rear setup switch or holding the  and  keys.
2. Use  to select SERV and press  to enter.
3. (Optional) If there is a service password configured, the FB1200 will display "P.CODE?" Press 
 - a. Enter the passcode using the FB1200 Front Panel Button Navigation (below).
 - b. When the last digit is highlighted, press  to submit.
4. Press  repeatedly until CAL is displayed, press  to enter.
5. Press the  key until CAL is shown, Press the  key to show the CAL:DEF setting
6. Press the  key to continue. The display will show CONFIR
7. Press the  key to enter
8. Press  until "1200" is displayed and the instrument returns to the main weigh screen.

FB1200 Front Panel Button Navigation

 → Advance to the next digit	 → Decrement the selected digit
 → Increment the selected digit	 → Return to the previous digit

Disclaimer

Every effort has been made to provide complete and accurate information. Reference the manual (51512) or the FB1200 Quick Calibration Guide for complete information.

If you have any questions, please contact the Fairbanks Distribution Support team, Product Manager or Technical Support










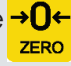


Description

This guide lays out the procedure for performing a factory default reset of the FB1200 instrument through the front panel. For both Calibration and No-Calibration.

Installation

The FB1200 should be properly wired to the scale and configured according to the FB1200 Service Manual. (51512)

Factory Default Reset - Front Panel (No Calibration)

1. Enter the FB1200 setup menu using the rear setup switch or holding the  and  keys.
2. Use  to select SERV and press  to enter.
3. (Optional) If there is a service password configured, the FB1200 will display "P.CODE?" Press 
 - a. Enter the passcode using the FB1200 Front Panel Button Navigation
 - b. When the last digit is highlighted, press  to submit.
4. Press  repeatedly until TEST is displayed, press  to enter.
5. Press the  key until DEFAULT is shown, Press the  key to enter
6. The display will show CONFIR
7. Press the  key to enter
8. Press  until "1200" is displayed and the instrument returns to the main weigh screen.